

Getting started:

Quick guide



Function indication is given with different colours.

 The function symbol is lit depending on the active function.

No light

The fan is off or activated for continuous operation.

Blue light

The fan runs due to increased humidity.

Flashing blue light

The fan runs because it has detected that it can lower the humidity in the room.

Green light

The air quality sensor has activated the fan.

Purple light

The fan has been started by the airing function.

Yellow light

The fan runs on the timer

Flashing yellow

The delay timer counts down, faster flashes towards the end.



Quickguide for Intellivent ICE


To access the functions that can be programmed. First, press the function icon.



All programmable function symbols light up.



To activate the desired function, press any of the four symbols and then follow the instructions to the right. The process is then ended by pressing the function icon  twice.

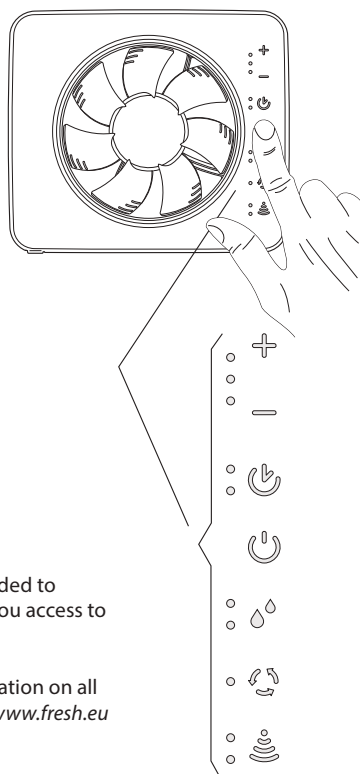

Fine-tuning via the App

The *Fresh ventilation* app can be downloaded to Android and IOS phones. The app gives you access to a variety of settings and functions.

See the Fresh website for detailed information on all fan functions with and without the app, www.fresh.eu



Timer Select time: One press at a time 15 min   30 min  	Timer Activate / deactivate delayed start Hold for 2 seconds. The lamps flash 3 times.  15 min   30 min  	Timer Increase or decrease air flow: Press the +/- buttons 
Humidity control Response indication: The corresponding lamp lights up Fast   Normal   Slow   Deactive  	Humidity control Step forward for response selection: Hold for 2 seconds Fast    Normal    Slow    Deactive   	Humidity control Increase or decrease air flow during humidity-activated operation: Press the +/- buttons 
Continuous operation Activate Press until the lamp comes on  	Continuous operation Deactivate: Press until the lamp goes out  	Continuous operation Setting the air flow: Increase or decrease Press the +/- buttons 
Light and air quality sensor Indications: The corresponding lamp lights up Light sensor   Air quality sensor   Light sensor & air quality sensor   Inactive  	Light and air quality sensor Activate/deactivate: Light sensor on/off Press repeatedly until the lamp comes on or off Light sensor   Air quality sensor on/off. Same as for light sensor. Air quality sensor  	Light and air quality sensor Setting the air flow: Increase or decrease Select the Timer speed function, which is common for the flow with lightsensor. Air quality function has same speed as humidity function. Press the +/- buttons 