



by  **Tecnosystemi**
group

ITEM CODE: 11126322B
INSPECTIONABLE ODOUR-FREE
DRY SIPHON WITH
AESTHETIC LID




TECHNICAL CHARACTERISTICS:

- ELIMINATES THE PROBLEM OF BAD SMELLS
- INSTALLED VERTICALLY ON WALL OR UNDERGROUND
- TRANSPARENT SIPHON BODY FOR INSPECTION
- REMOVABLE TRANSPARENT SIPHON BODY FOR MAINTENANCE
- CONSTRUCTION LID FOR PROTECTION FROM PLASTER
- AESTHETIC REMOVABLE LID TO ACCESS SIPHON BODY
- EXTERNAL STOP FOR FLUSH COURSE WALL INSTALLATION
- PIPE INLET DIMENSIONS: FROM Ø16 TO Ø40
- PIPE OUTLET CONNECTION BY CODES: 11126344-11126345- 11126316-11126319-11126320-11126346-11126326-11126327- 11126324-11126346T (WITH O-RING)
- IT IS POSSIBLE TO FIT THE PIPES Ø40-36-32-28 WITH THE ADAPTER SLEEVE ACCESSORY "MTG" (11126353)
- WITH THE JUNCTION SLEEVE ACCESSORY MG-TCR21 CODE 11126313 IT IS POSSIBLE TO FIT THE PIPE FOR RIGID CONDENSATION TCR21 CODE 11126324
- FOR PIPES FROM Ø 16 TO Ø 40
- FOR PIPE S.C. TCR 21 CODE 11126324 WITH SLEEVE MG-TCR 21 COD. 11126313
- FOR PIPE S.C. 18/20 WITH O-RING CODE 11126346T
- FOR PIPE S.C. 18/20 CODE 11126320 - 11126345 - 11126346


COMPONENTS:

- 1- SIPHON BOX WITH LEVEL
- 2- CONSTRUCTION PROTECTION
- 3- SEAL
- 4- TRANSPARENT SIPHON
- 5- FINISHING COVER


ASSEMBLY INSTRUCTIONS

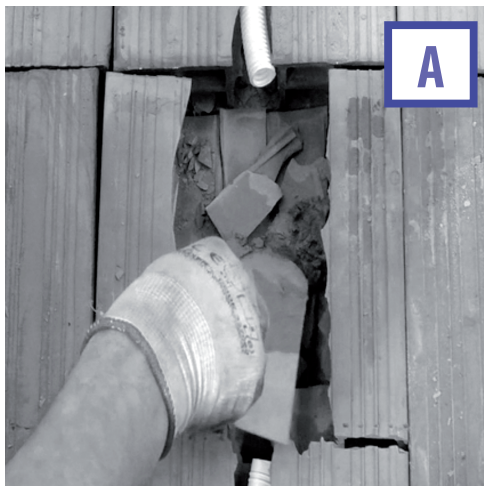


1. APPLY SOME PLASTER OR FOAM AT THE BACK OF THE NICHE (A). INSERT THE TOP WATER INLET AND THE OUTLET BOTTOM PIPE ON THE SLEEVES OF THE SIPHON.

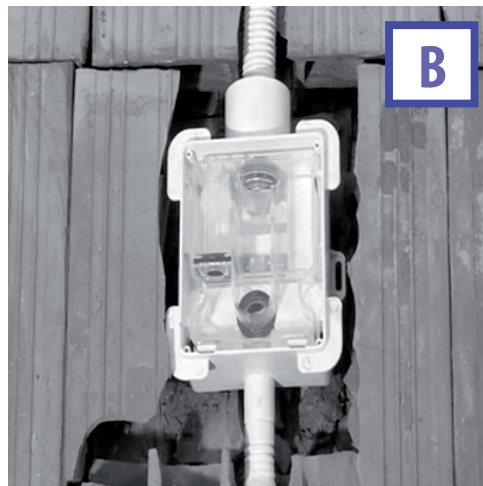

2. INSERT THE SIPHON INTO THE NICHE, FIX IT ON THE BACK USING THE PLASTER OR FOAM PREVIOUSLY APPLIED LEVELING IT USING THE PROVIDED LEVEL. (B) FOR WALL FIXING USE SCREWS AND WALL PLUGS (NOT SUPPLIED) THROUGH THE SIDE SLOTS.

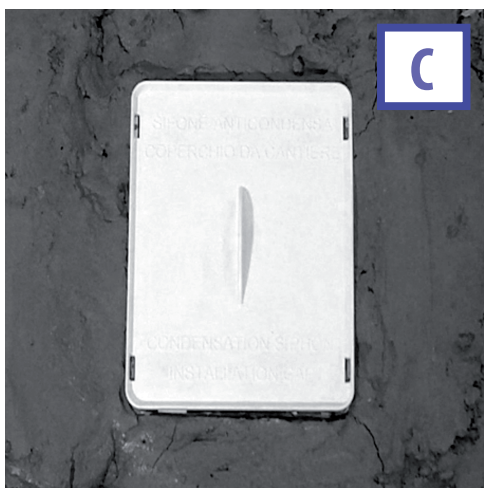

3. CLOSE THE SIPHON WITH THE "CONSTRUCTION COVER" AND START PLASTERING (C)

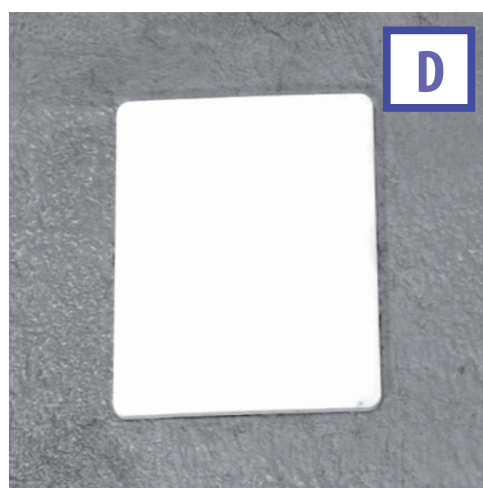

4. WHEN THE PLASTER DRIES, PAINT THE WALL, THEN REMOVE THE "CONSTRUCTION COVER" AND POSITION THE FINISHING COVER. (D)

MAINTENANCE INSTRUCTIONS

1. REMOVE THE FINISHING COVER. UNHOOK THE TRANSPARENT SIPHON HELD BY THE TWO CLIPS PRESSING THEM AND EXTRACT THE TANK.
2. RINSE WITH WATER OR APPROPRIATE DETERGENTS (NO ALCOHOL, VINEGAR..)
3. PUT THE SIPHON BACK IN ITS POSITION (PAY ATTENTION TO THE SEALS)
4. PLACE THE FINISHING COVER.



DIMENSIONS (mm)

